

NOTES:


1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS. REFER TO DEVICE TEMPLATE FOR BACKSET.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.
4. CUTOUT DIMENSIONS MARKED (*) TO BE 1/2 (12.7) DEEP.

LHR SHOWN
RHR OPPOSITE

TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
EO6200A SERIES RIM DEVICE	T30508

TRIM		A	B	C
KNOB	B410 G510		●	
	B450 G550			
	B455 G555	●	●	
	B457 G557	●		
LEVER	A410 C310 D310 E310		●	●
	L310 N410 R310 PR310			
	A450 C350 D350 E350			●
	L350 N450 R350 PR350			
	A455 C355 D355 E355			
	L355 N455 R355 PR355	●	●	●

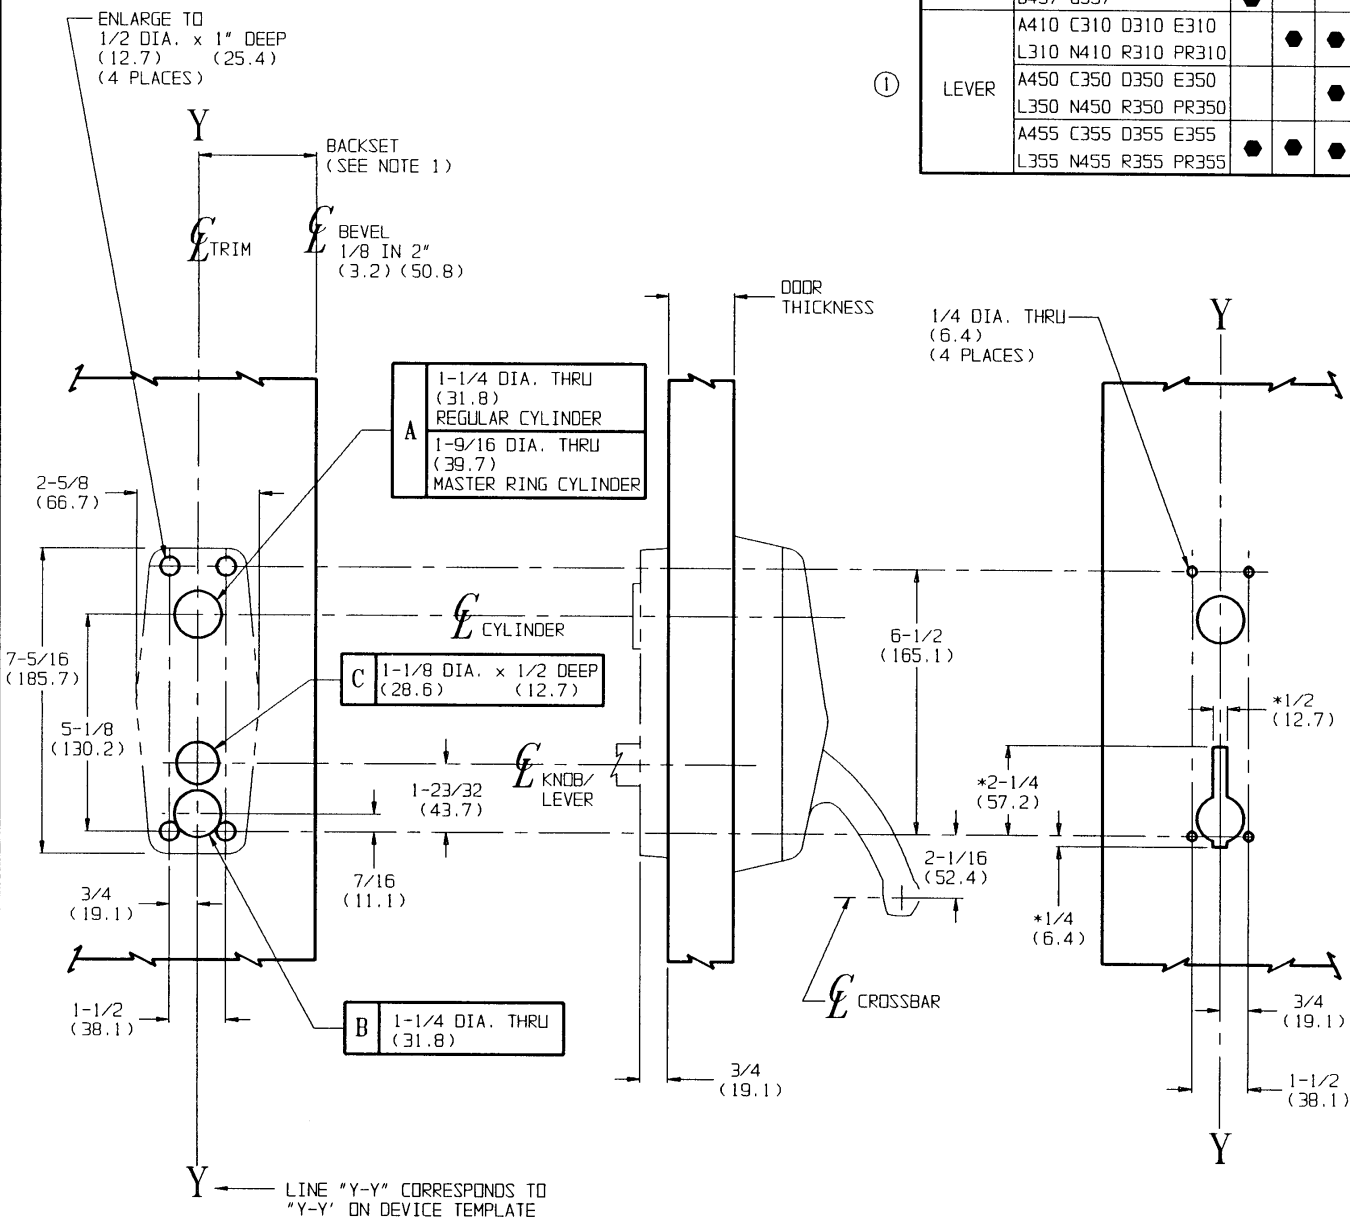

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

A410 B457 D355 G550 L355 PR350
A450 C310 E310 G555 N410 PR355
A455 C350 E350 G557 N450 R310
B410 C355 E355 L310 N455 R350
B450 D310 G510 L350 PR310 R355
B455 D350

KNOB/LEVER ESCUTCHEON TRIM
FIRE RATED RIM DEVICE

**Corbin
Russwin**™
www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES T30525 OR. OLD
DATE 2/22/94 TEMPLATE NUMBER T30525-1