


- **For Non-Fire Rated Exit Devices:**  
Sex nuts or through bolts **are recommended** for wood core, wood and plastic covered composite doors and any type of door without reinforcements.
- **For Fire Rated Exit Devices:**  
Sex nuts or through bolts **are required** for wood core, wood and plastic covered composite doors and any type of door without reinforcements.

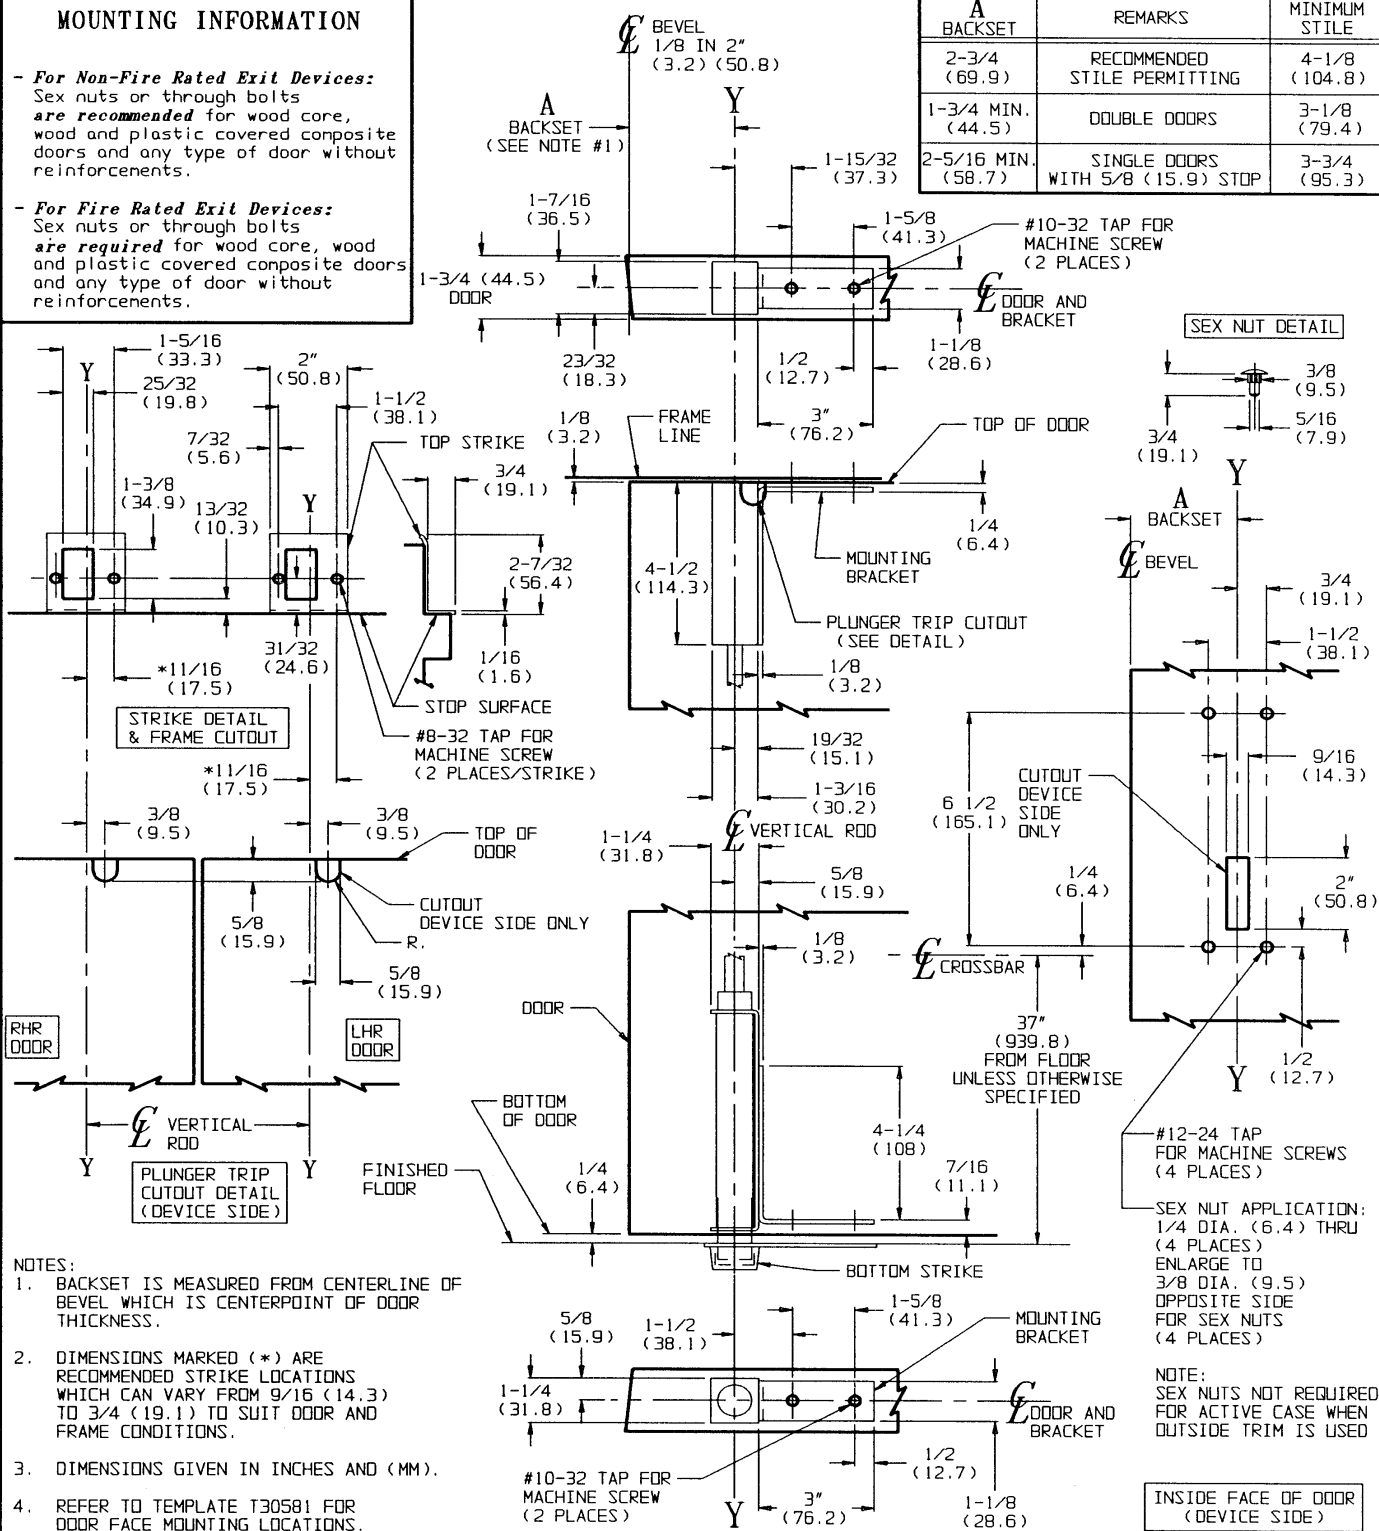

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All Architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

CROSSBAR CONCEALED  
VERTICAL ROD DEVICE  
(BRACKET MOUNTING - METAL DOORS)

**Corbin  
Russwin**  <sup>TM</sup>  
www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES VT30242, VT30243		DR. KJ	APR <i>[Signature]</i>
DATE 4/6/93	TEMPLATE NUMBER T30580		