


Sex nuts or through bolts **are required** for wood core, wood and plastic covered composite doors, and any type of door without reinforcements.

1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
2. RECOMMENDED MINIMUM STILE 4-1/8 (104.8)
3. FOR PREPARATION OF TRIM, REFER TO SEPARATE TEMPLATE.
4. DIMENSIONS GIVEN IN INCHES AND (MM).
5. REFER TO TEMPLATE T30597 FOR S06  
OPTIONAL BOTTOM THRESHOLD STRIKE 304F34.

D	REMARKS
7/16 (11.1)	WITHOUT SILENCERS
3/8 (9.5)	WITH SILENCERS

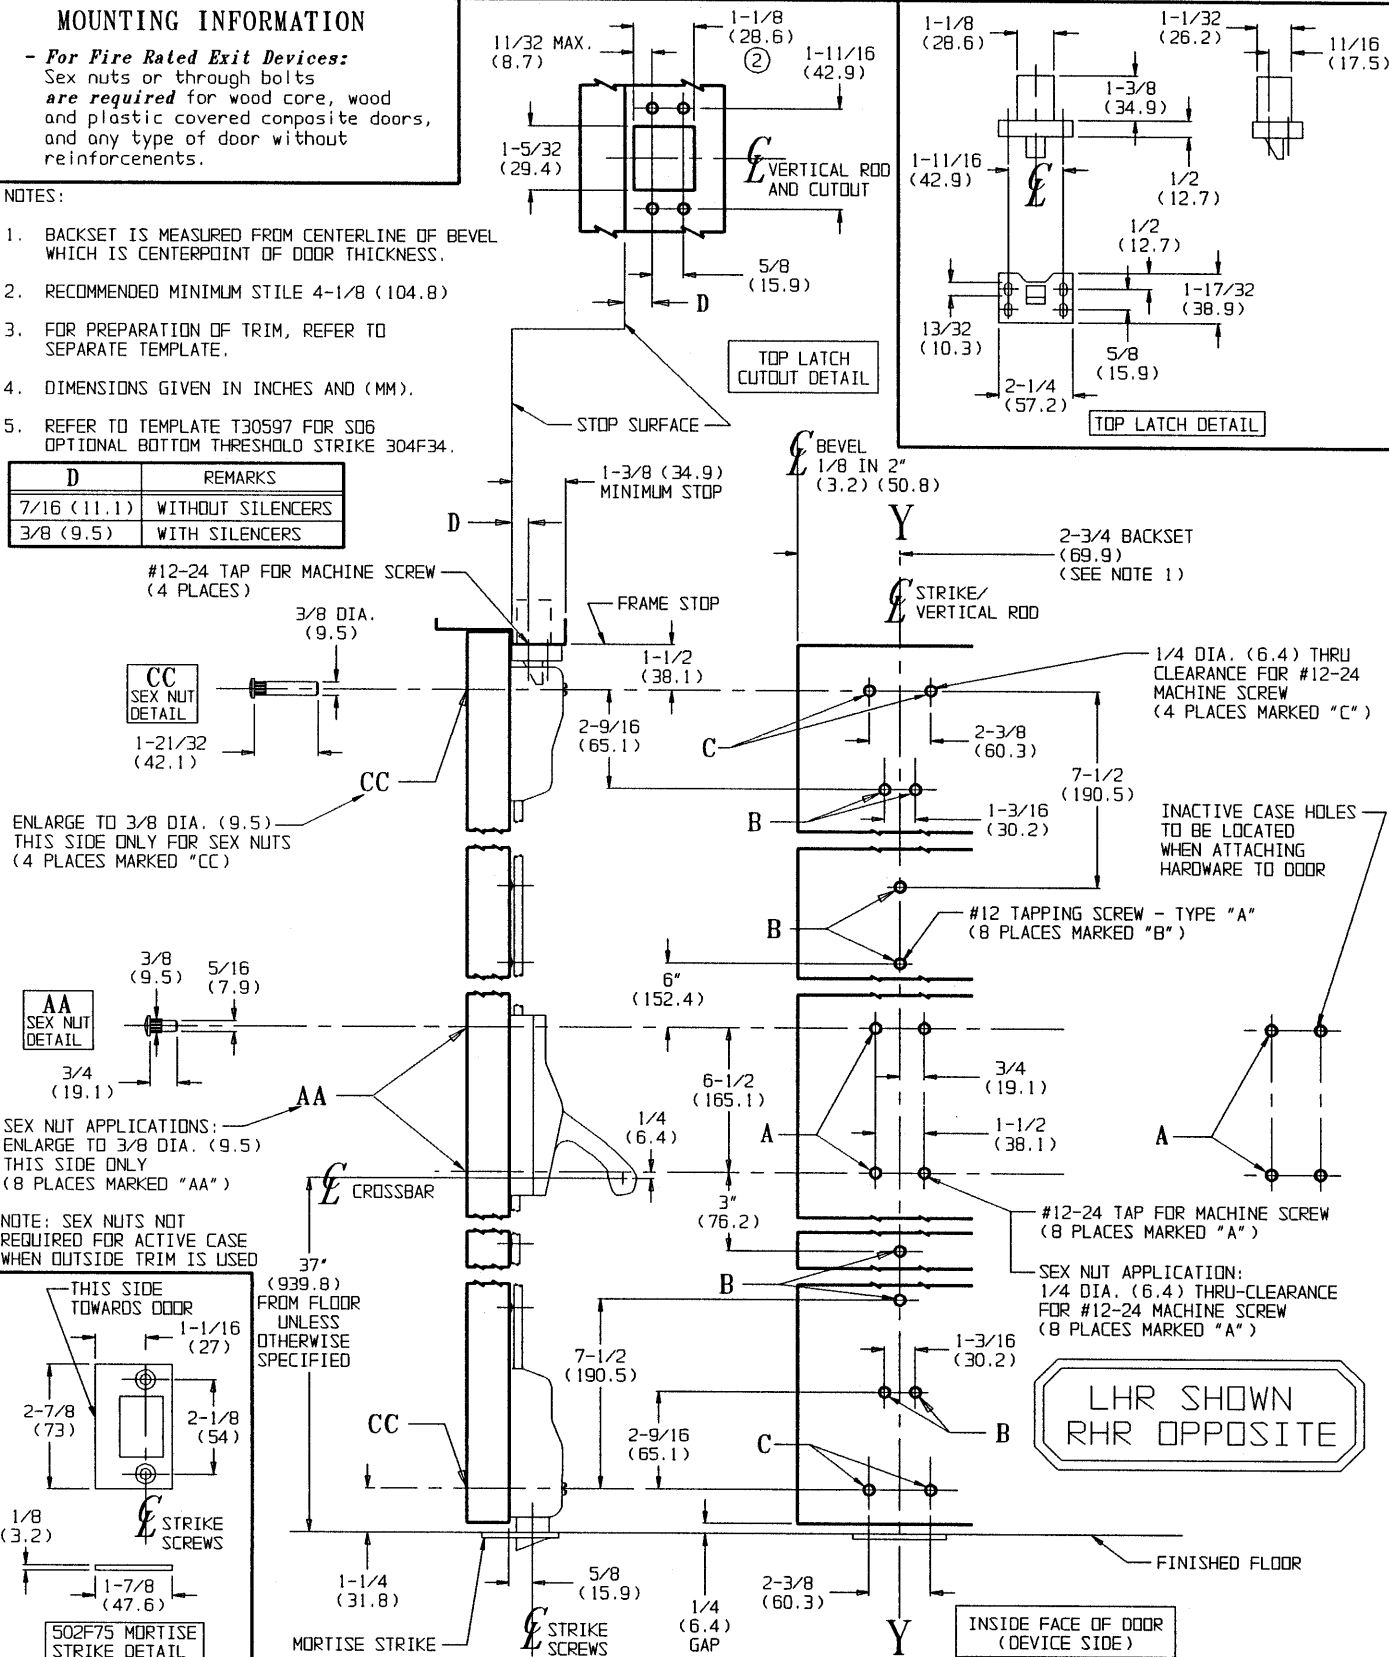

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

FIRE RATED

**Corbin  
Russwin**  TM

DO NOT SCALE DRAWING

SUPERSEDES	T30596-1	DR. OLD	APPRO <i>[Signature]</i>
------------	----------	---------	--------------------------

DATE	1-98	TEMPLATE NUMBER	T30596-2
------	------	--------------------	----------