


NOTES:

1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS. REFER TO DEVICE TEMPLATE FOR BACKSET.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. TRIM CUTOUT NOT REQUIRED FOR B550 AND G650 TRIMS. ①

LHR SHOWN
RHR OPPOSITE

TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
ED6800 SERIES CVR DEVICE	T30580
	T30581

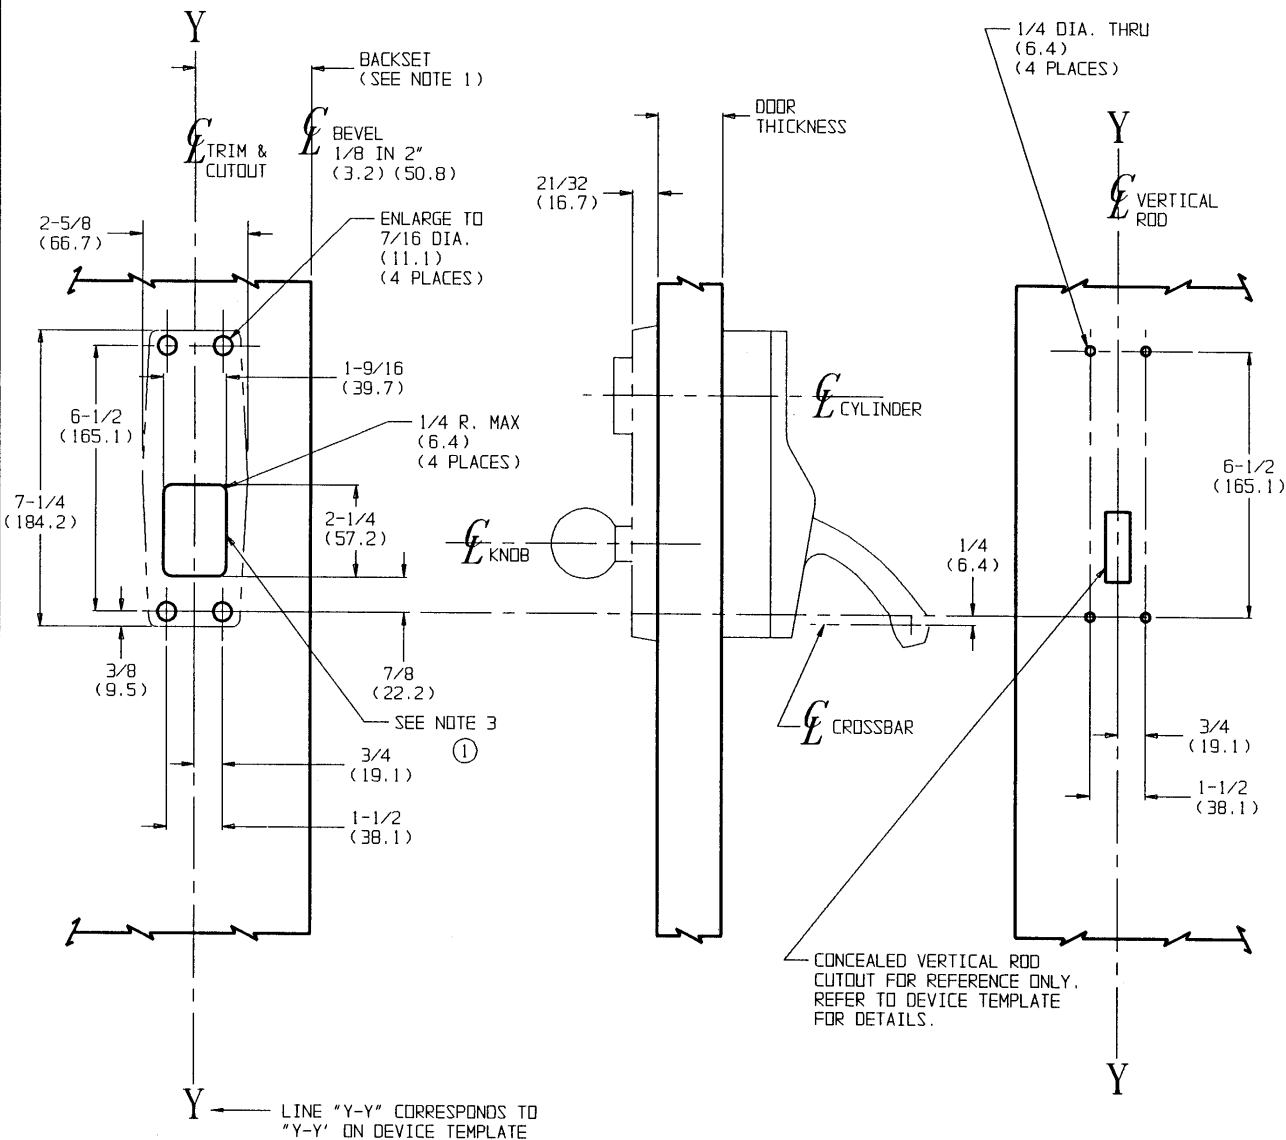

OUTSIDE FACE OF DOOR
(TRIM SIDE)

INSIDE FACE OF DOOR
(DEVICE SIDE)

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

B510 B550 B555 B557
G610 G650 G655 G657

KNOB ESCUTCHEON TRIM
CROSSBAR CONCEALED VERTICAL
ROD DEVICE

**Corbin
Russwin**
www.corbinrusswin.com

DO NOT SCALE DRAWING
SUPERSEDES T30627 OR: OLD T30627
DATE 1/28/94 TEMPLATE NUMBER T30627-1