

MOUNTING INFORMATION

- For Non-Fire Rated Exit Devices:

Sex nuts or through bolts **are recommended** for wood core, wood and plastic covered composite doors and any type of door without reinforcements.

- For Fire Rated Exit Devices:


Sex nuts or through bolts **are required** for wood core, wood and plastic covered composite doors and any type of door without reinforcements.

LHR SHOWN
RHR OPPOSITE

SINGLE DOOR APPLICATIONS ONLY

TEMPLATE CROSS REFERENCE (FOR DOUBLE DOOR APPLICATIONS)

DESCRIPTION	TEMPLATE
50B MULLION	T30427
510 MULLION	T30533

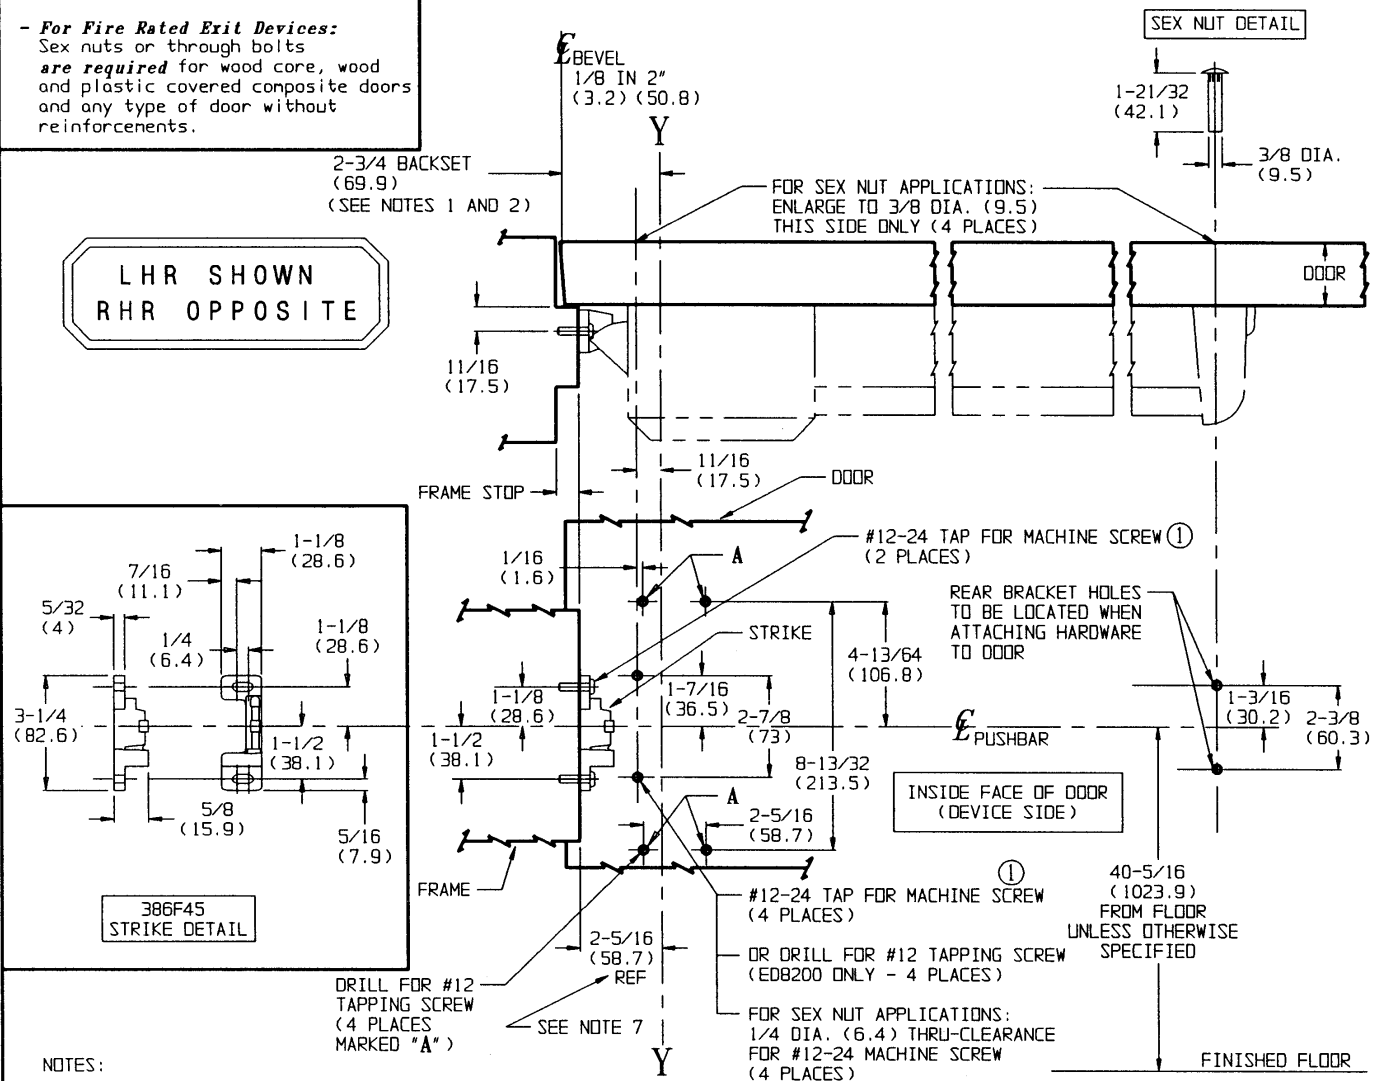

NOTES:

- BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
- [CAUTION]** THIS TEMPLATE IS FOR SINGLE DOOR APPLICATIONS ONLY. REFER TO APPROPRIATE MULLION TEMPLATE FOR DOUBLE DOOR APPLICATIONS. NOTE THAT THE BACKSET DIMENSION FOR SINGLE DOORS DIFFERS FROM THE BACKSET FOR DOUBLE DOORS.
- GLASS BEAD SHIMS ARE NOT INTENDED FOR USE WITH ED8200 AND ED8200B RIM ALARM EXIT DEVICES.
- FOR PREPARATION OF TRIM, REFER TO SEPARATE TEMPLATE.
- RECOMMENDED MINIMUM STILE 5" (127).
- DIMENSIONS GIVEN IN INCHES AND (MM).
- THIS REFERENCE DIMENSION APPLIES TO A SINGLE DOOR PREPPED TO A 2-3/4" (69.9) BACKSET WITH A 5/8" (15.9) FRAME STOP AND 1/8" (3.2) DOOR GAP. WHEN PREPPED DOOR IS MOUNTED IN A FRAME WITH A 1/2" (12.7) STOP, USE 1/8" (3.2) SHIM UNDER STRIKE TO MAINTAIN PROPER LATCH ENGAGEMENT.

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ED8200 SERIES
ED8200B SERIES
BY M61 & M62

PUSHBAR RIM ALARM EXIT DEVICE

**Corbin
Russwin**

DO NOT SCALE DRAWING

SUPERSEDES	T30491	OR	BTH	APP	<i>[Signature]</i>
DATE	04/06/93	TEMPLATE NUMBER	T30491-1		