
MOUNTING INFORMATION

Sex nuts or through bolts are required for wood and plastic covered composite doors, and any type of door without reinforcements and recommended for wood core and metal clad (Kalamein) tupe doors.

RH SHOWN LH OPPOSITE

| TEMPLATE CROSS REF | ERENCE |
|--------------------|----------|
| DESCRIPTION | TEMPLATE |
| DC26910 SERIES | T30536 |

CAUTION: CLOSER TO BE INSTALLED IN A TRUE HORIZONTAL POSITION TO ENSURE PROPER CLOSER PERFORMANCE.

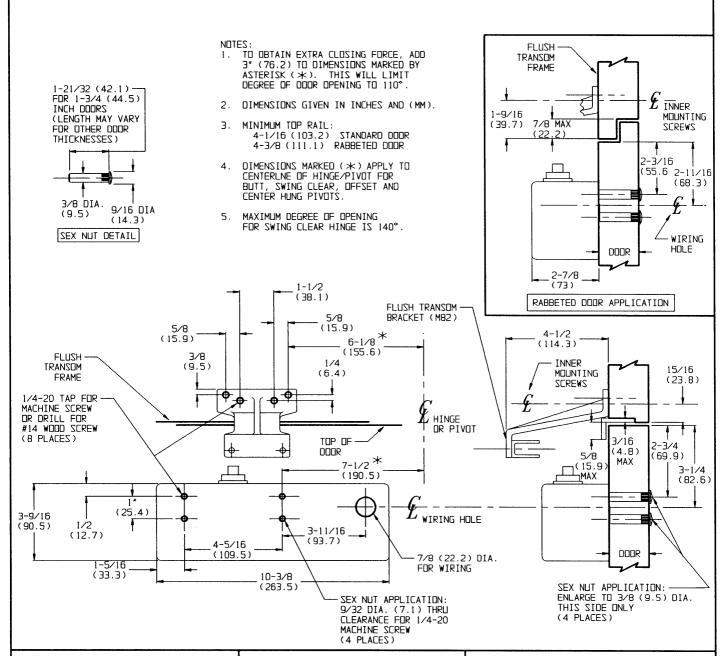

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

DC26910 SERIES BY M82

ELECTROMECHANICAL SURFACE DOOR CLOSER PARALLEL ARM MOUNTING BY FLUSH TRANSOM BRACKET



SUPERSEDES VT30191 DRAWING

STATE DRAWING

PP Q 2

TEMPLATE T 3 0 5 2 2