

MOUNTING INFORMATION

Sex nuts or through bolts **are required** for wood and plastic covered composite doors, and any type of door without reinforcements and **recommended** for wood core and metal clad (Kalamain) type doors.

RH SHOWN
LH OPPOSITE


TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
DC26910 SERIES	T30536
DC26920 SERIES	T30534
DC26930 SERIES	T30537

CAUTION: CLOSER TO BE INSTALLED IN A TRUE HORIZONTAL POSITION TO ENSURE PROPER CLOSER PERFORMANCE.

NOTES:

1. TO OBTAIN EXTRA CLOSING FORCE, ADD 3" (76.2) TO DIMENSIONS MARKED BY ASTERISK (*). THIS WILL LIMIT DEGREE OF DOOR OPENING TO 110°.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. 2-1/16 (52.4) MINIMUM TOP RAIL FOR MOUNTING CLOSER BRACKET.
4. DIMENSIONS MARKED (*) APPLY TO CENTERLINE OF HINGE/PIVOT FOR BUTT, SWING CLEAR, OFFSET AND CENTER HUNG PIVOTS.

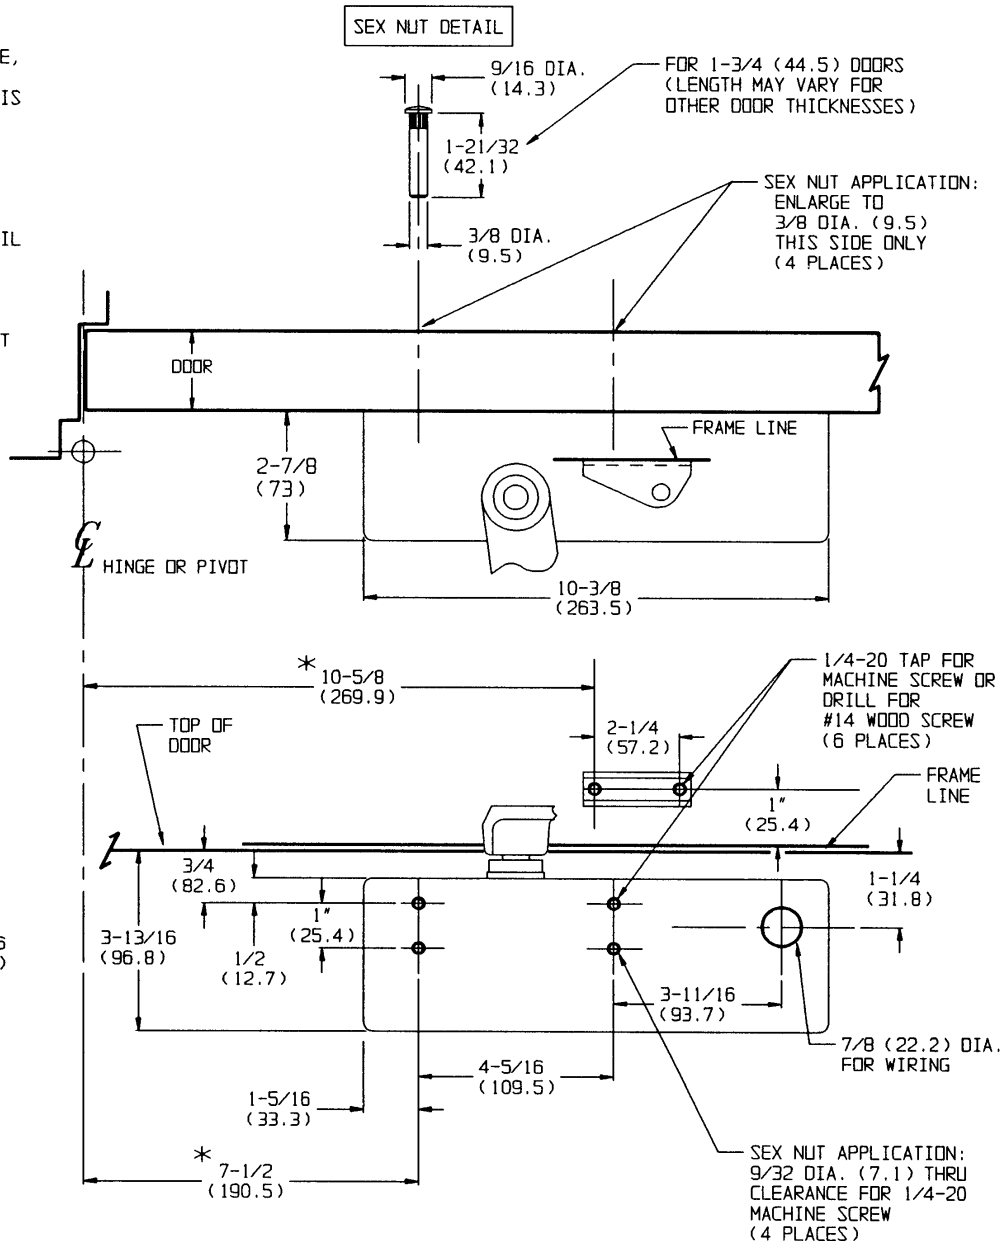

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

DC26900 SERIES

ELECTROMECHANICAL
SURFACE DOOR CLOSER
REGULAR MOUNTING

**Corbin
Russwin**™

DO NOT SCALE DRAWING

SUPERSEDES	VT30028	DR.	KJ	DATE	6/4/93	TEMPLATE NUMBER	T30535
------------	---------	-----	----	------	--------	-----------------	--------