


TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
DL2000 SERIES TUBULAR DEADLOCK	T30474

CAUTION: DOOR AND FRAME MANUFACTURERS

WHEN DOOR GASKETING OR SILENCERS ARE USED, PROPER ALLOWANCES MUST BE MADE FOR STRIKE LOCATION TO MAINTAIN A COMMON CENTERLINE WITH LOCK AND DOOR AS SHOWN SO THAT BOLT WILL FREELY ENTER STRIKE.

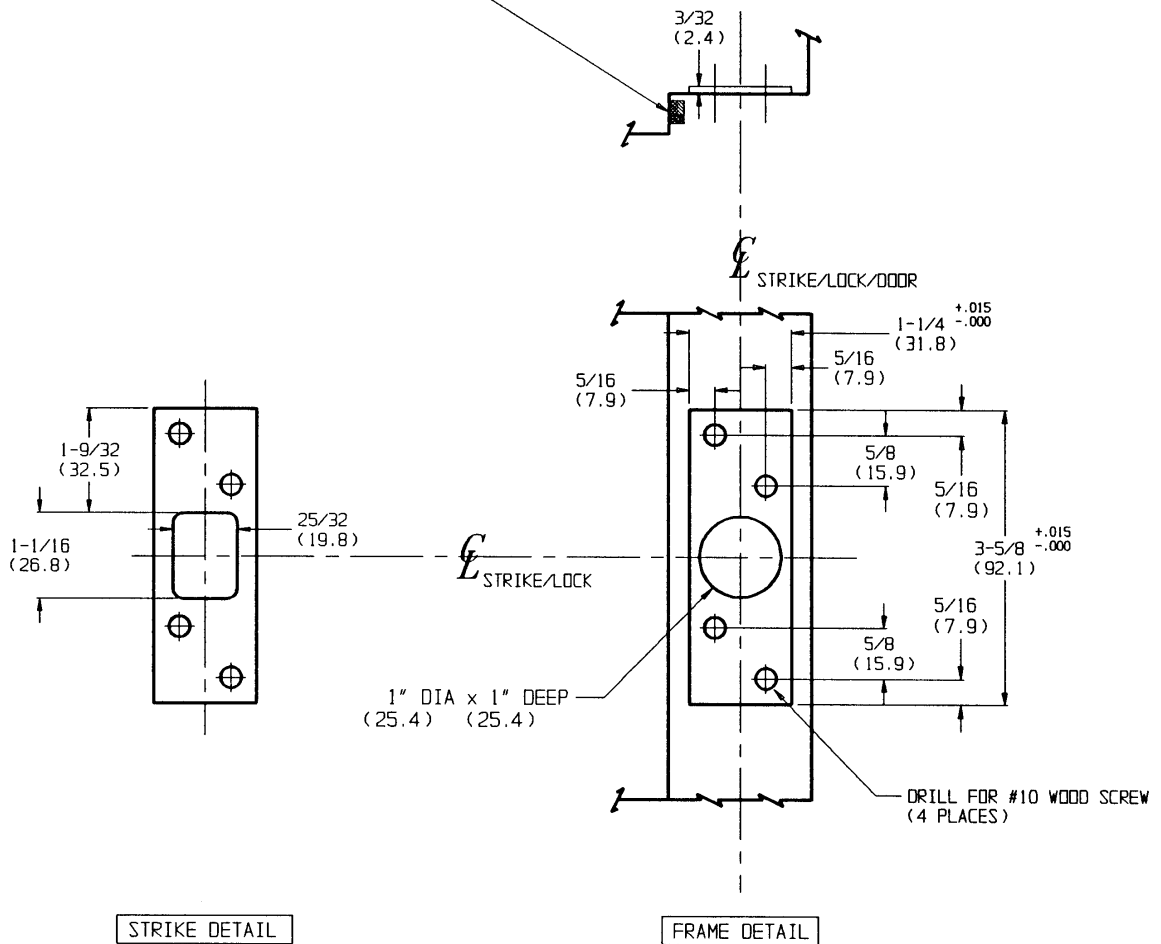

NOTES:

1. DIMENSIONS GIVEN IN INCHES AND (MM).

TOLERANCES	
INCHES	(MM)
.005	(.127)
.015	(.381)

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All Architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

SD002

484F57

WOOD JAMB STRIKE

Corbin Russwin
www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES	DR.	CJF	APPROVED
DATE	03/16/93	TEMPLATE NUMBER	T30542