


NOTES:

1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. FULL DUMMY TRIM SAME AS SHOWN EXCEPT APPLIED TO BOTH SIDES.

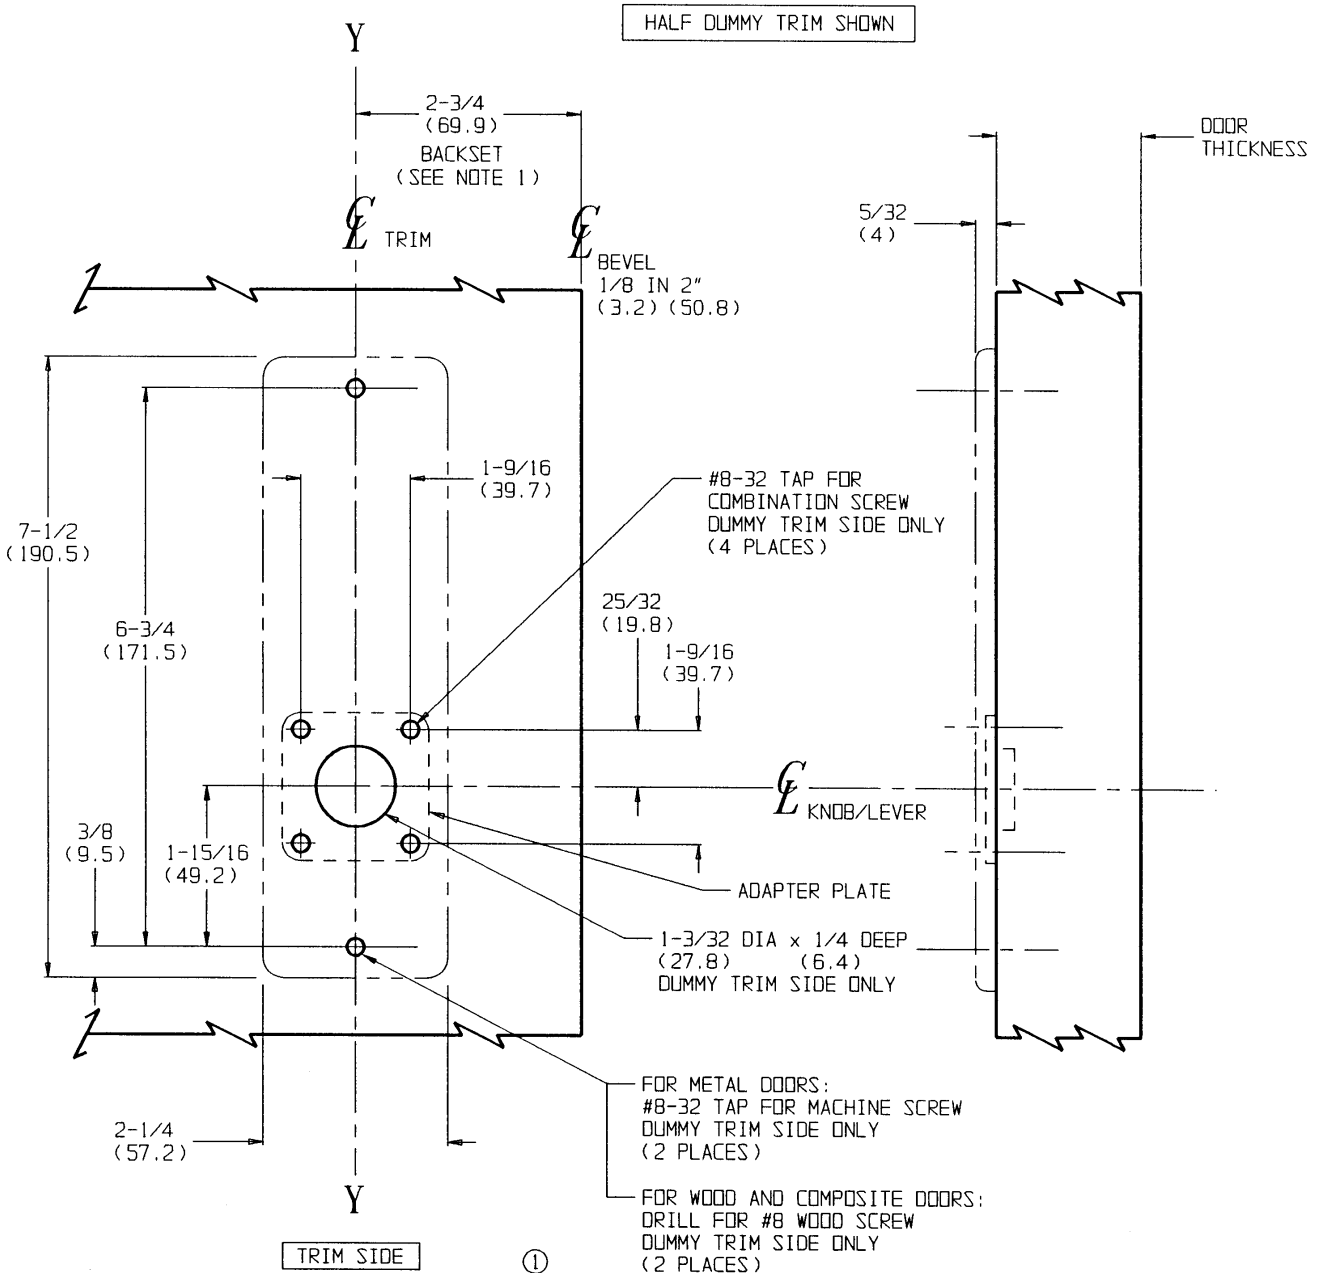

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

ASM	DSM	GWM	PSM
BRM	ESM	LSM	RSM
BWM	GRM	LWM	RWM
CSM	GSM	NSM	YWM

MORTISE LOCK ESCUTCHEON  
HALF AND FULL DUMMY TRIM

**Corbin  
Russwin**™  
www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES	T30558	DR.	DLD	APR
DATE	2/23/94	TEMPLATE NUMBER	T30558-1	