


**NOTES:**

1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.

TEMPLATE CROSS REFERENCE	
DESCRIPTION	TEMPLATE
E07600 SERIES MORTISE DEVICE	T30578
MLE08, MLE09 MORTISE EXIT LOCK	T30610

TRIM	A	*B CUTOUT	C
T11M10, T12M10		●	
T11M50, T12M50			●
T11M55, T12M55	●	●	
T11M57, T12M57	●		●

LHR SHOWN  
RHR OPPOSITE

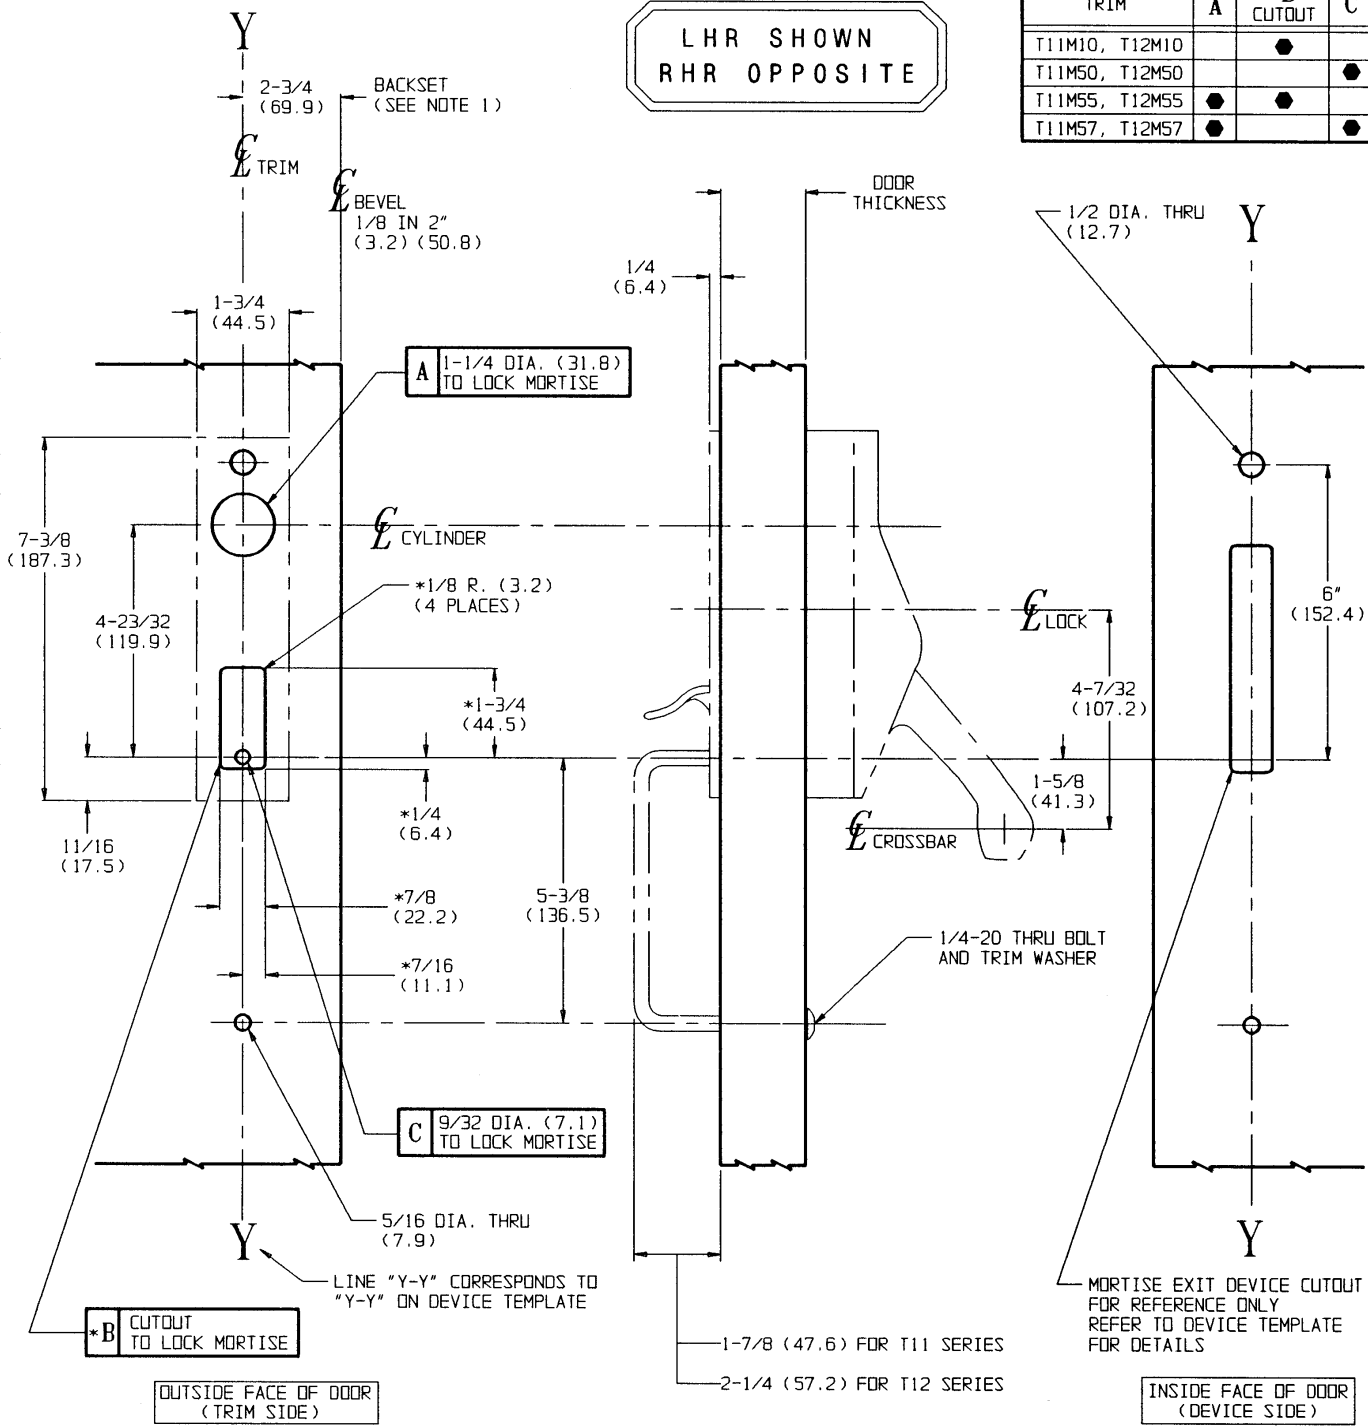

**RESPONSIBILITY**

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

T 11M10	T 12M10
T 11M50	T 12M50
T 11M55	T 12M55
T 11M57	T 12M57

THUMBPIECE PULL ESCUTCHEON TRIM  
CROSSBAR NARROW STILE  
MORTISE DEVICE

**Corbin Russwin**  
www.corbinrusswin.com™

DO NOT SCALE DRAWING

SUPERSEDES	W25453, 22944C	DR.	BTH	
DATE	03/25/93	TEMPLATE NUMBER	T 30579	