

NOTES:


1. BACKSET IS MEASURED FROM CENTERLINE OF BEVEL WHICH IS CENTERPOINT OF DOOR THICKNESS. REFER TO DEVICE TEMPLATE FOR BACKSET.
2. DIMENSIONS GIVEN IN INCHES AND (MM).
3. REFER TO CHART FOR SPECIAL HOLES REQUIRED BY TRIM FUNCTION.

LHR SHOWN
RHR OPPOSITE

TEMPLATE CROSS REFERENCE

DESCRIPTION	TEMPLATE
ED6400 SERIES VR DEVICE	T30582
ED6400 SERIES x M65	T30583
ED6600 SERIES MORTISE DEVICE	T30588
ED6400A SERIES VR DEVICE	T30596

VERTICAL ROD	MORTISE	A	B
T510 T610	T9M10 T10M10		●
T550 T650	T9M50 T10M50		
T555 T655	T9M55 T10M55	●	●
T557 T657	T9M57 T10M57	●	

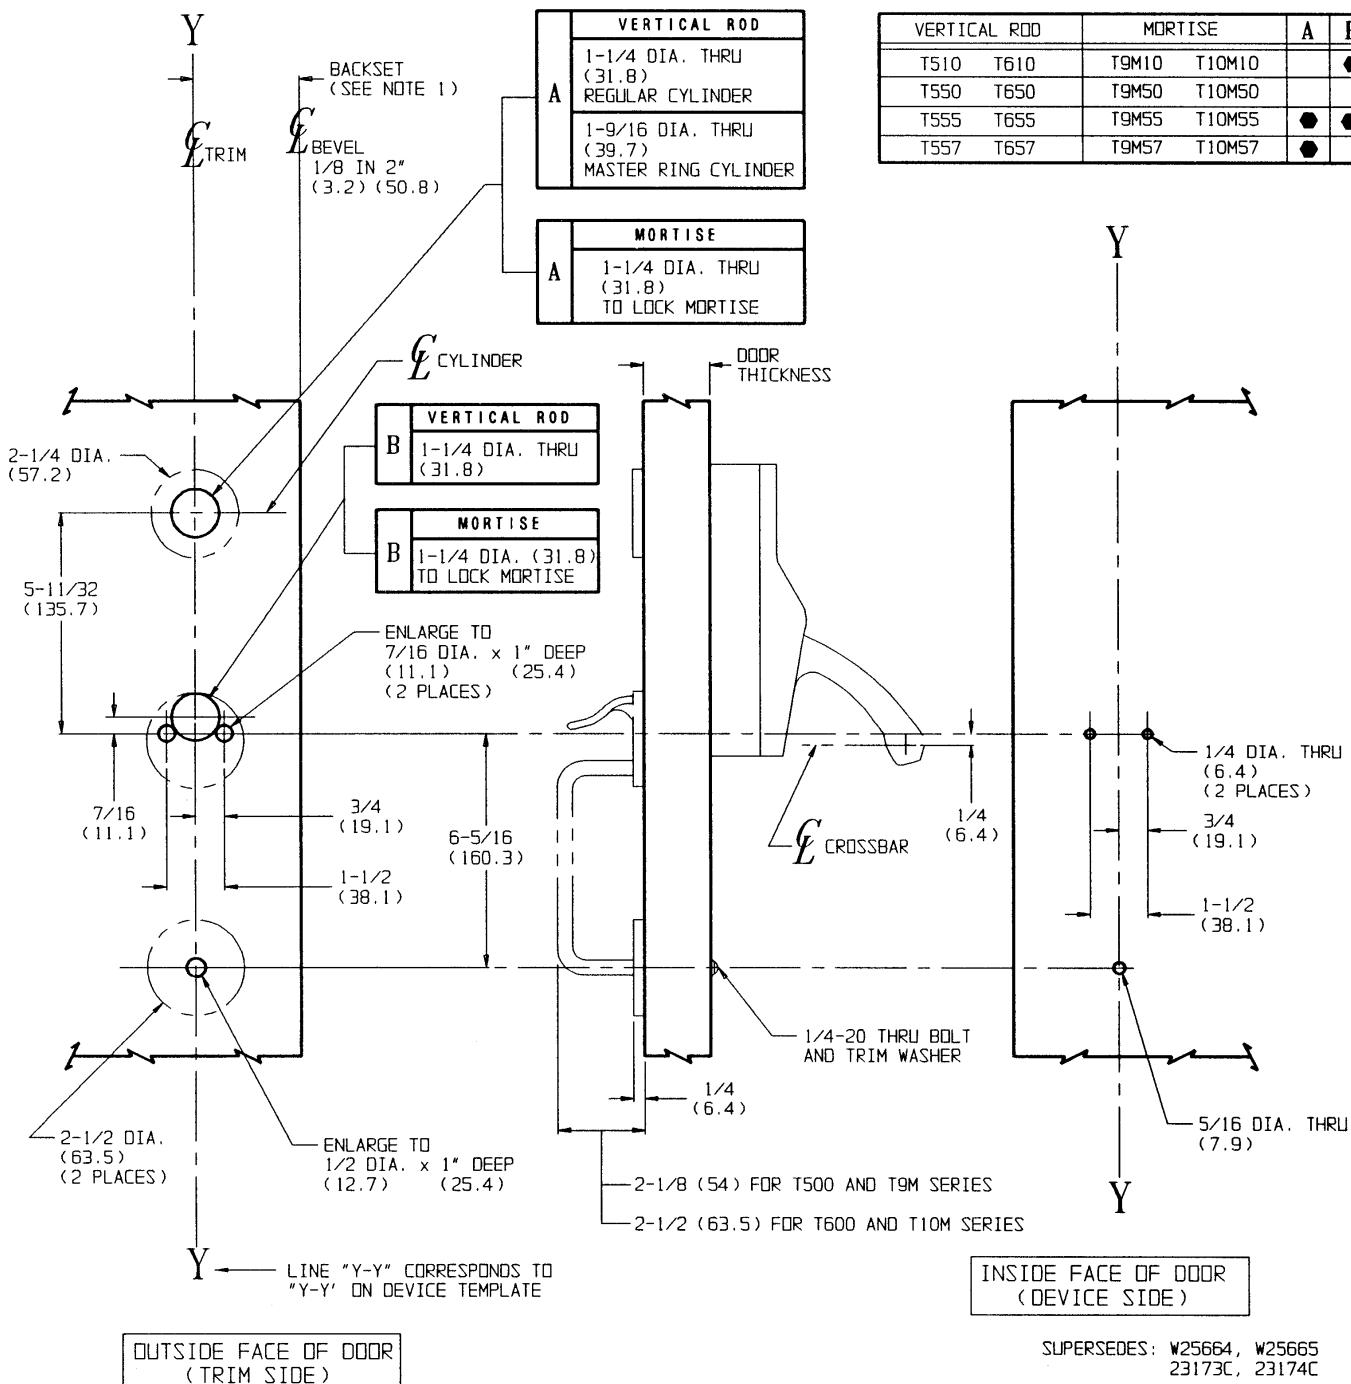

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

T510 T610 T9M10 T10M10
T550 T650 T9M50 T10M50
T555 T655 T9M55 T10M55
T557 T657 T9M57 T10M57

THUMBPIECE PULL SECTIONAL TRIM
MORTISE AND VERTICAL ROD DEVICE

**Corbin
Russwin**
www.corbinrusswin.com

DO NOT SCALE DRAWING

SUPERSEDES	SEE ABOVE	DR.	BTH	DATE	TEMPLATE NUMBER
				03/31/93	T30585